

# Operating your GPS



	TomTom	Garmin
<b>Getting Started</b>		
<b>Power On/Off:</b>	<p>Power on/off button is on the top right of GPS. Press and hold the on/off button for 2 seconds to switch on or off.</p> <p>A screen will appear, showing:</p> <p><b>TomTom Start:</b> Plan Route / Browse Map with different features at the bottom of the screen.</p> <p><b>TomTom One:</b> The unit will display your current location. Tap screen to take you to main menu.</p>	<p>Slide the power key to the left.</p> <p>A screen will appear, giving you on-screen instructions</p>
<b>Note</b>	Your location will not show if you are inside a building.	Your location will not show if you are inside a building.
<b>Charging</b>	The charger input is located at the base of the GPS. Plug this into the cigarette lighter. If your battery is not fully charged, the unit may not operate. It takes approximately 2 hours to fully charge.	The charger input is located at the back of the GPS. Plug this into the cigarette lighter. If your battery is not fully charged, the unit may not operate. It takes approximately 2 hours to fully charge.
<b>Main Menu</b>	Tap the centre of the screen to open the main menu at any time.	
<b>Resetting the unit</b>	Reset the unit by using a pen or a straightened paper clip to push the reset button which will take a while.	If your GPS stops responding, turn it off and then on again to reset. If this does not help, press and hold the reset button on the bottom of the unit for several seconds. Do not use a sharp object to reset, as this can damage the unit.

	TomTom	Garmin
<b>To Log a Destination</b>		
	<ul style="list-style-type: none"> <li>Tap on the main screen to enter the menu.</li> <li>Tap <b>Navigate to</b> icon or <b>Plan Route</b>.</li> <li>Tap <b>Address</b> icon.</li> <li>Type the name of the <b>Town</b>. Tap the name when it is shown in the list.</li> <li><b>Street Name</b> – a list of street names will appear - select the street.</li> <li>Type the <b>House Number</b>.</li> <li>Tap <b>Done</b>. Your route is being calculated.</li> <li>Once your destination is set, tap <b>Done</b>.</li> <li>Your GPS will navigate you to your destination, both on screen and with voice prompts.</li> </ul>	<ul style="list-style-type: none"> <li>Tap on the main screen to enter the menu.</li> <li>Select <b>where to?</b></li> <li>Select <b>address</b>.</li> <li>Touch <b>spell city</b>, enter the city and touch <b>done</b>. If you are unsure of the city, touch <b>search all</b>.</li> <li>Enter the number of the address and tap <b>done</b>.</li> <li>Enter the street name and tap <b>done</b>.</li> <li>Select the correct street in the list, if necessary.</li> <li>Touch the address, if necessary.</li> </ul>
<b>To Log a Co-ordinate</b>		
	<ul style="list-style-type: none"> <li>Tap on the screen.</li> <li>Click on <b>Navigate to</b>.</li> <li>Press the arrow for more options.</li> <li>Click on the icon <b>Longitude &amp; Latitude</b>.</li> <li>Enter your co-ordinates.</li> </ul>	<ul style="list-style-type: none"> <li>Select <b>where to?</b></li> <li>Select <b>coordinates</b>.</li> <li>Touch a box to enter a coordinate. Once done, touch <b>next</b>.</li> <li>You can change the coordinate format by selecting <b>format</b>.</li> </ul>

TomTom	Garmin
<b>Other Features</b>	
<p><b>TomTom One Classic</b></p> <ul style="list-style-type: none"> <li>Zoom: To zoom in and out, simply press the + or – sign on the top of the screen.</li> <li>Several icons are available on Main Menu 1-2, the <b>Change Preference</b> icon allows you to use night colors, show POI on map, turn off sound, change volume, change voice, language, brightness, set clock. The <b>Help Me</b> icon is also on the main menu screen. Once you have set up your unit to your preference, tap on <b>Done</b> to go back to the main screen.</li> </ul> <p><b>TomTom Start</b></p> <ul style="list-style-type: none"> <li>On the taskbar at the bottom of the screen five more options are available (<b>Sound, Night, Help, Options &amp; Done</b>).</li> <li><b>Done</b> tab is in conjunction with the two main icons that appears on main screen which is: plan route and browse map. This tab is used to complete a correction.</li> </ul>	<ul style="list-style-type: none"> <li>Zoom: To zoom in and out, simply press the + or – sign on the top of the screen.</li> <li>Return to menu: Simply touch menu if you want to return to the main menu.</li> <li>To view a map: Select <b>view map</b> from main menu,</li> <li>To see where you are: Select <b>where am I?</b> to view your current location.</li> </ul>

TomTom	Garmin
<b>Points of interest (POI)</b>	
<p>You may also navigate to points of interest (POI) by:</p> <ul style="list-style-type: none"> <li>Entering the name of the POI on your unit under <b>search</b>.</li> <li>Or, under <b>search</b> the unit will come up with POI for your selection.</li> </ul>	<p>You may also navigate to points of interest (POI) by:</p> <ul style="list-style-type: none"> <li>Touch <b>Where to</b> and select <b>points of interest</b>.</li> <li>Select a destination and press <b>Go!</b></li> <li>To enter letters contained in the name, touch <b>where to</b>, then select <b>points of interest</b> and then select <b>spell name</b>.</li> <li>To search for a location in a different area, touch <b>where to</b> and select <b>near</b>.</li> </ul>

TomTom	Garmin
<b>Please note</b>	
There is a comprehensive manual with your TomTom. Please refer to this booklet for more detailed operating instructions.	There is a comprehensive manual with your Garmin. Please refer to this booklet for more detailed operating instructions.
<b>Assistance</b>	
Should you need further assistance, please contact TomTom support helpline during office hours on 0800 980 671.	Should you need further assistance, please contact Garmin support helpline during office hours on 0861 427 646.

